

## eKIC Instructions

The eKIC comes with a trigger pad and one bent beater. The eKIC pedal is sold separately. You can use your own bass drum pedal, but may need adjust the “starting point” of the pedal’s fulcrum (where the beater attached to the pedal when at rest) to be further forward than normal.

Remove the existing beater from your bass drum pedal and install the provided bent beater in it's place. Notice that you install the beater from the top going down into the hole.

Loosely attach the eKIC onto the pedal and make sure that the beater is center on the pad before tightening any screws (beater OR eKIC)

On the Alternate Mode pedal (below), the top lug nut adjusts the height of the beater. The bottom lug nut adjusts the height of the pedal board.

Go to [www.alternatemode.com](http://www.alternatemode.com) to watch a video if you still need help

